


Decorator Screwless Blank Wall Plates

Enerlites®

Installation

WARNING

Turn the POWER OFF at the circuit breaker before installation or removal! Risk of electrical shock!

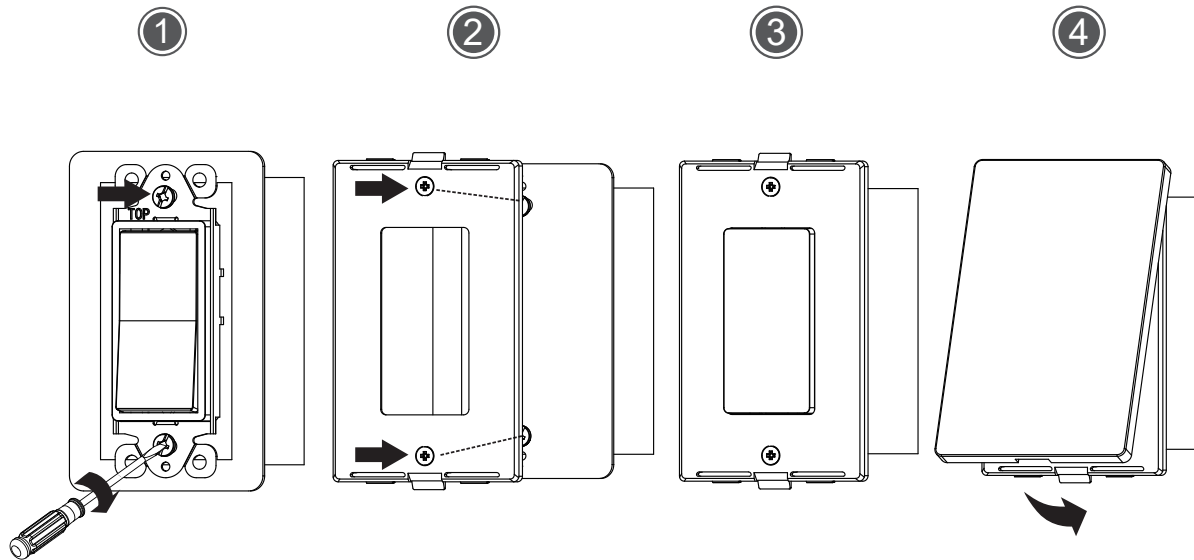

Remove device

Align mounting plate

Tighten screws

Snap outer wall plate on

©2022 Enerlites Inc. CA, U.S.A.
WWW.ENERLITES.COM
0906220209