INSTALLATION INSTRUCTIONS

Enerlites®
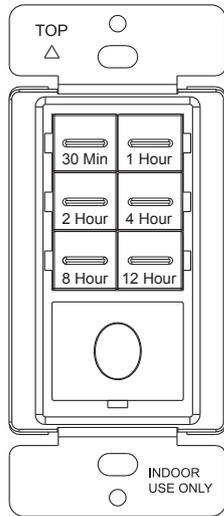
HET06-12
Preset In-Wall Countdown Timer

WARNING

Turn the POWER OFF at the circuit breaker before installing the Timer

Read and understand these instructions before installing. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s) and make sure power is off before wiring the device.

"Caution: High Voltage-Disconnect power supply before servicing"

This device is intended for installation in accordance with the National Electric Code and local regulations.

Use Copper wires ONLY.

WIRING DIRECTIONS

1. Connect the BLACK wire on the switch to the HOT wire.
2. Connect the WHITE wire on the switch to the NEUTRAL wire.
3. Connect the RED wire on the switch to the LOAD wire.
4. Connect the GREEN wire on the switch to the GROUND wire.

SETTING/ OPERATING

Preset Buttons: The LED indicator will light up to confirm each button press. There are 6 buttons with preset times of 30 min, 1, 2, 4, 8 or 12 hours.

- While the Load is OFF, press and release the button with the desired time once to turn the Load on for that selected amount of time.

- While the Load is ON, press and release the button with the desired time once to restart the countdown with the newly selected time.

Manual ON Button: The LED indicator will light up to confirm each button press. The Manual ON button is the large button located below the preset buttons.

- While the Load is OFF, press and release the Manual ON button to turn the Load ON with the last selected timer preset.
- While the Load is ON, press and release the Manual ON button to override the timer and turn the Load OFF.
- To hold the Load ON: Press and hold the Manual ON button for 8 seconds. The Load will turn ON and stay ON. All LED indicators should be OFF
  - Press and release the Manual ON button to turn the Load OFF.
  - Press and release the button with the desired time once to keep the Load ON for that selected amount of time.

SPECIFICATIONS

|	
Voltage	125VAC, 60HZ
Load(Single Pole Circuit)	
Resistive	15A
Tungsten	1000W
Standard Ballast	1200VA
Electronic Ballast/LED	5A or 600W
Motor	1/2 HP
Time Delay	30min, 1,2,4,8 or 12 hours
Humidity	95% RH, non-condensing
Operating Temperature	32° to 131° F (0° to 55° C)

DESCRIPTION

The HET06-12 is a timer switch with 6 preset time buttons and 1 Manual ON button. The state-of-the-art timer delivers convenient automation for lights, fans, appliances and electronics, both indoor and out. Save energy, save money, and feel secure. All Loads connected to this timer will automatically turn OFF when the selected time expires. The 6 selectable times are 30 Min, 1, 2, 4, 8 or 12 Hours.

FEATURES

- Easily replaces a standard single pole Light or Fan switch.
- Compatible with most types of lights including LED
- Attractive blue LED indicators conveniently located next to each button
- Indoor use only
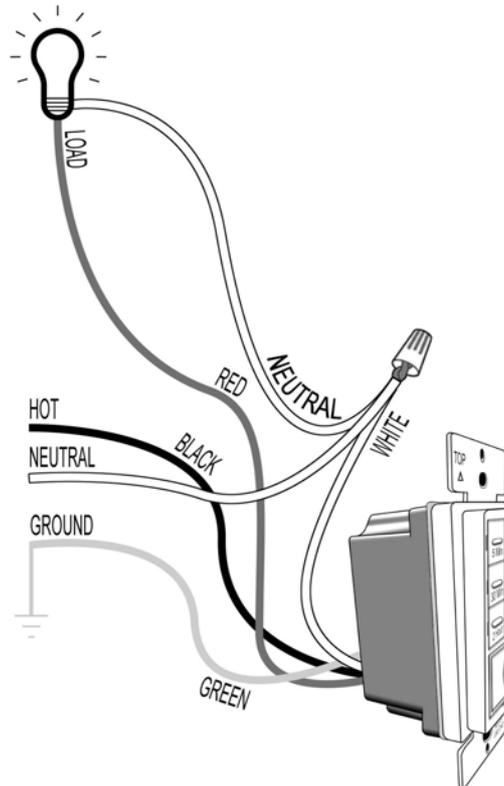
WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.