


# 3-Way Switch Diagram

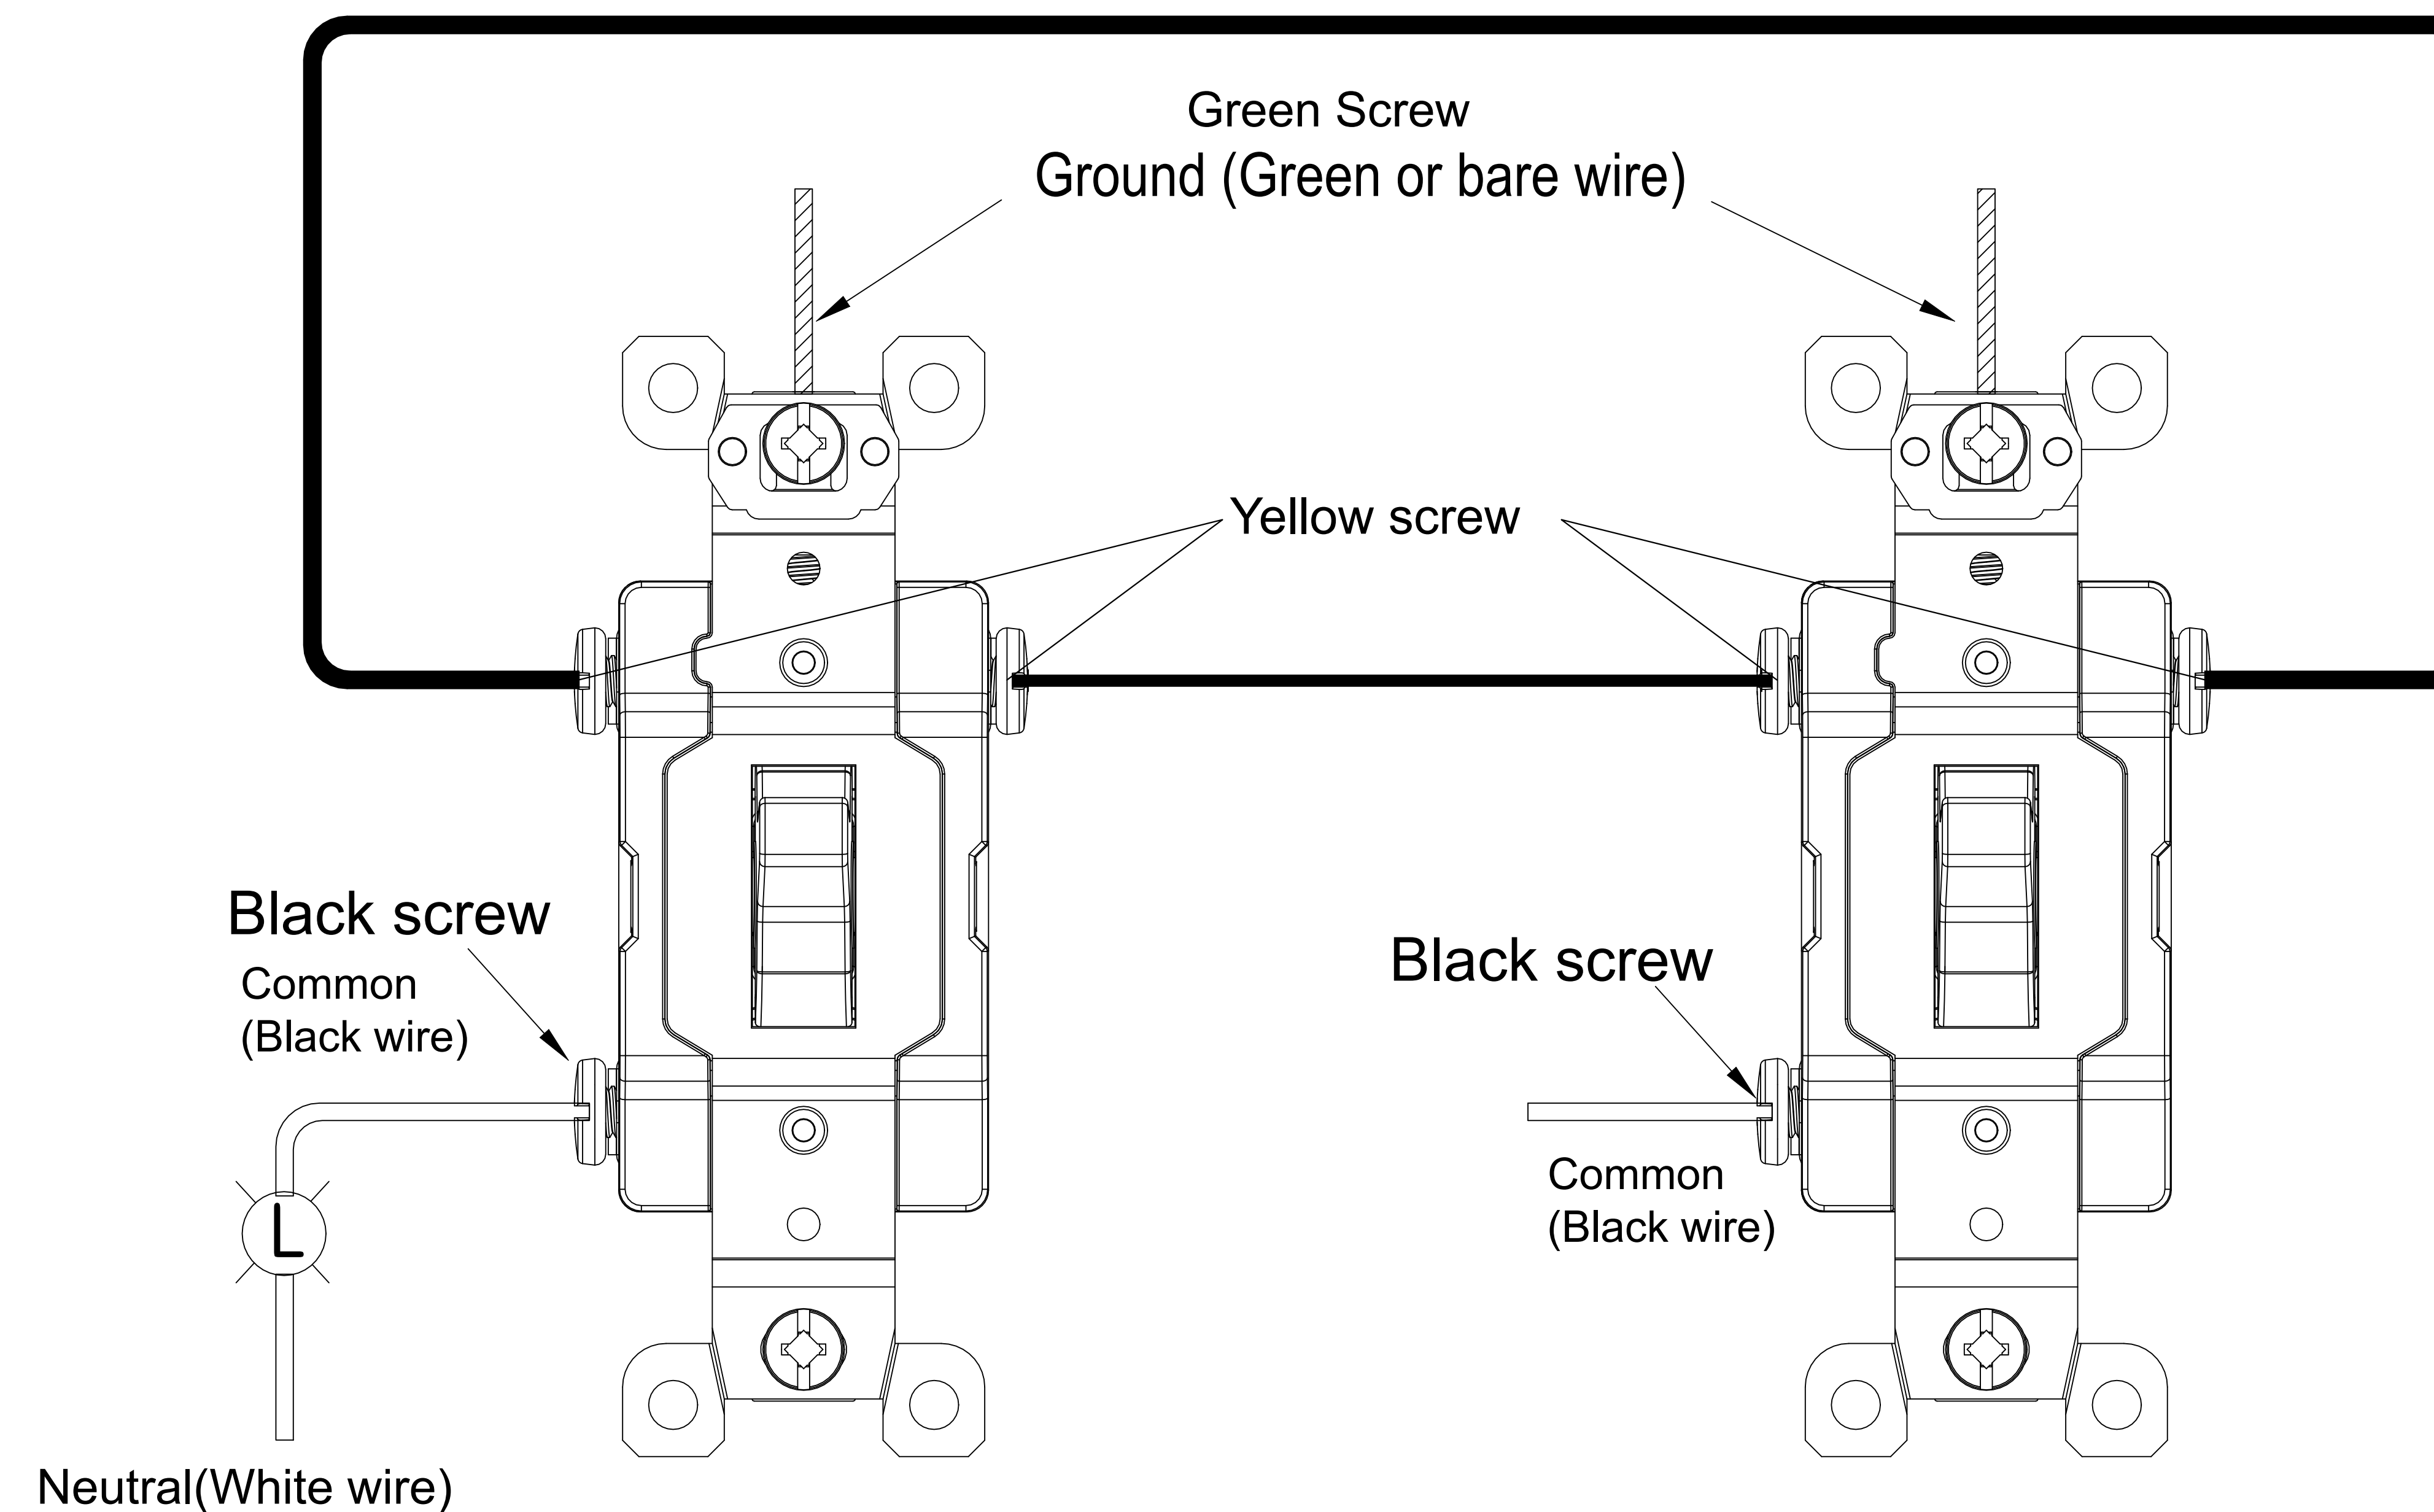

## Switch Instructions

NOTICE: For installation by a qualified person in accordance with national and local electrical codes.

WARNING: Risk of Electric Shock or Death. Disconnect power before installing.

CAUTION: USE COPPER CONDUCTORS ONLY; 20A, 10AWG to 12AWG.

- Remove insulation from conductors 1/2 inch.
- Side Wire: Wrap conductor securely around terminal screw. Tighten terminal screws securely, 14 pound · inch (1.6 N·m) of torque.

## French

AVIS: Doit être installé par un électricien qualifié conformément aux codes de personne nationaux et locaux.

AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE OU LA MORT. Débrancher le circuit avant de procéder au montage.

ATTENTION: EMPLOYER UNIQUEMENT DES CONDUCTEURS EN CUIVRE. 20A, du calibre 10 AWG au calibre 12AWG.

- Enlever l'isolant des conducteurs 12.7mm.
- Câblage Latéral: Enrouler solidement le conducteur autour de la vis de borne. Reserrer les vis de bornes. Couple de serrage: 1.6 N·m.

## Spanish

AVISO: Para ser instalado por un electricista calificado, de acuerdo con los códigos persona nacionales y locales.

ADVERTENCIA: RIESGO DE CHOQUE ELÉCTRICO O MUERTE. Desconectar la corriente antes de la instalación.

CUIDADO: UTILIZAR SOLAMENTE CONDUCTORES DE COBRE. 20A, 10AWG a 12AWG.

- Quitar el aislamiento de los conductores 12.7mm.
- Cableado Lateral: Enrollar firmemente el conductor alrededor del tornillo del borne. Ajustar los tornillos de los bornes con un par de 1.6 N·m.