
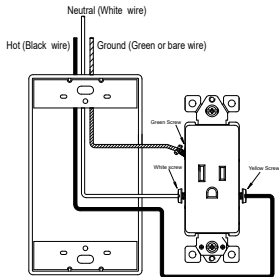


# Single Receptacle Diagram

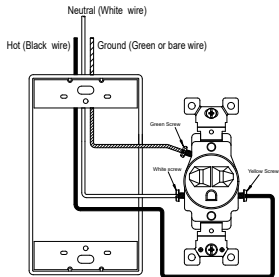

61150

## Receptacle Instructions

**NOTICE:** For installation by a qualified person in accordance with national and local electrical codes.

**WARNING:** Risk of Electric Shock or Death. Disconnect power before installing.

**CAUTION:** USE COPPER CONDUCTORS ONLY; 15A, 12AWG to 14AWG.

- Remove insulation from conductors 5/8 inch.
- Side Wire: Wrap conductor securely around terminal screw. Tighten terminal screws securely, 9-12 pound-inch(1.0-1.4N·m) of torque.

## French

**AVIS:** Doit être installé par un électricien qualifié conformément aux codes de personne nationales et locaux.

**AVERTISSEMENT:** RISQUE DE CHOC ÉLECTRIQUE OU LA MORT. Débrancher le circuit avant de procéder au montage.

**ATTENTION:** EMPLOYER UNIQUEMENT DES CONDUCTEURS EN CUIVRE. 15A, du calibre 12AWG au calibre 14AWG.

- Enlever l'isolant des conducteurs 15.9mm.
- Câblage Latéral: Enrouler solidement le conducteur autour de la vis de borne. Reserrer les vis de bornes. Couple de serrage: 1.0-1.4 N·m.

## Spanish

**AVISO:** Para ser instalado por un electricista calificado, de acuerdo con los códigos personales y locales.

**ADVERTENCIA:** RIESGO DE CHOQUE ELÉCTRICO O MUERTE. Desconectar la corriente antes de la instalación.

**CUIDADO:** UTILIZAR SOLAMENTE CONDUCTORES DE COBRE. 15A, 12AWG a 14AWG.

- Quitar el aislamiento de los conductores 15.9mm.
- Cableado Lateral: Enrollar firmemente el conductor alrededor del tornillo del borne. Ajustar los tornillos de los bornes con un par de 1.0-1.4 N·m.