
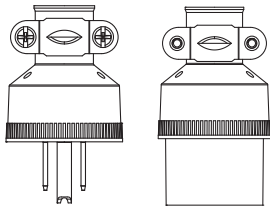




Straight Blade Plugs and Connectors

Enerlites®

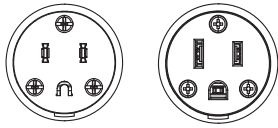

15AMP, 125V
2 Pole, 3-Wire
NEMA 5-15

66212-Black

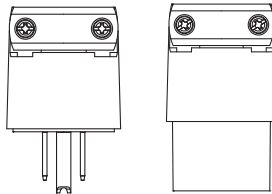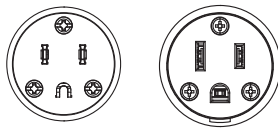

15AMP, 125V
2 Pole, 3-Wire
NEMA 5-15

66202-Yellow

Installation

1. **WARNING:** TO AVOID FIRE, SHOCK, OR DEATH, UNPLUG CORD OR TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT POWER IS OFF BEFORE WIRING!
2. Loosen assembly screws on plug surface, and separate device into device housing and device cover (P1). Then loosen the terminal screws inside (P2).
3. Pass the wires through the cord clamp, remove insulation exposing bare copper wire.
4. Insert bare copper wire into inner wire clamp and tighten each terminal screw.
5. Assemble device housing with device cover. Align keyed device cover with key on device's housing, tighten assembly screws and the cord clamp screws (P2).

Wire Diagram

