


3-Way Switch Diagram

Enerlites

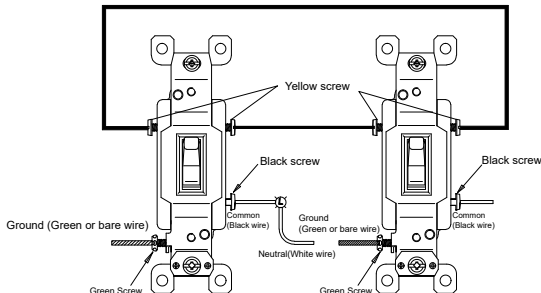

83200

Switch Instructions

NOTICE: For installation by a qualified person in accordance with national and local electrical codes.

WARNING: Risk of Electric Shock or Death. Disconnect power before installing.

CAUTION: USE COPPER CONDUCTORS ONLY; 20A, 10AWG to 12AWG.

- Remove insulation from conductors 5/8 inch.
- Side Wire: Wrap conductor securely around terminal screw. Tighten terminal screws securely, 9-12 pound inch(1.0-1.4N-m) of torque.

French

AVIS: Doit être installé par un électricien qualifié conformément aux codes de personne nationaux et locaux.

AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE OU LA MORT. Débrancher le circuit avant de procéder au montage.

ATTENTION: EMPLOYER UNIQUEMENT DES CONDUCTEURS EN CUIVRE, 20A, du calibre 10 AWG au calibre 12AWG.

- Enlever l'isolant des conducteurs 15.9mm.
- Câblage Latéral: Enrouler solidement le conducteur autour de la vis de borne. Reserrer les vis de bornes. Couple de serrage: 1.0-1.4 N.m.

Spanish

AVISO: Para ser instalado por un electricista calificado, de acuerdo con los códigos persona nacionales y locales.

ADVERTENCIA: RIESGO DE CHOQUE ELÉCTRICO O MUERTE. Desconectar la corriente antes de la instalación.

UIDADO: UTILIZAR SOLAMENTE CONDUCTORES DE COBRE. 20A, 10AWG a 12AWG.

- Quitar el aislamiento de los conductores 15.9mm.
- Cableado Lateral: Enrollar firmemente el conductor alrededor del tornillo de la borne. Ajustar los tornillos de los bornes con un par de 1.0-1.4 N.m.