
INSTALLATION INSTRUCTIONS

Enerlites F⊃ox

962301-C-D / 962301-S-D

Two Gang Pop-up Floor Box Assembly with 20A Decorator Duplex Tamper & Weather Resistant Receptacle and RJ45

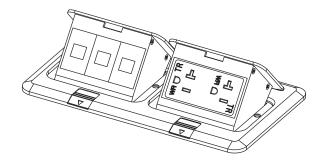

SPECIFICATIONS

Cover MaterialReceptacle Rating	
Box:	
Box Material	Pre-galvanized
Knockout Size	Steel 1/2" and 3/4"
Adjustable Height	Up to 1" depth

DESCRIPTION/ FEATURES

Two gang pop-up floor box assembly, including two 20 amp decorator duplex tamper & weather resistant receptacles, FB-12 box, gasket and cover.

- Compact and stylish design with adjustable height function metal box with the choice of Brass(C) or Nickel-Plated Brass(S).
- · Corrosion resistant hardware ensure long life span and reliable
- · Easy access to power when you need it. Snap the cover closed when not
- Used for carpet and wood floors. Also great for counter-top applications.

WARNING


Turn the POWER OFF at the circuit breaker before installing the Floor Box

Read and understand these instructions before installing. This device is intended for installation in accordance with the National Electric Code and local regulations. It is recommended that a qualified electrician performs this installation. Make sure to turn off the circuit breaker or fuse(s) and make sure power is off before wiring the device. Use copper wire only, or equivalent.

10-12 AWG Stranded or Solid Copper wire is recommended.

WIRING DIRECTIONS

- 1. Connect the HOT wire to the BLACK wire.
- 2. Connect the NEUTRAL wire to the WHITE wire.
- 3. Connect the GROUND wire to the GREEN wire on the switch.

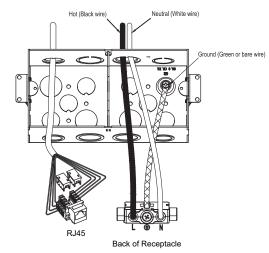

FLOOR BOX INSTALLATION

Before Installation:

Ensure there is sufficient depth & space below the sub floor.

Step 1


For carpeted floors:

Cut out the amount of carpet based on the size of the cover.

For wood sub-floors:

- Tape the template on the area you want to place the floor box.
- Use a knife to cut the outline of the box. Start with the ears and move inwards. Cut the box shape without the ears completely through the sub-
- Cut 1/4" depth into the sub-floor for the mounting ears.

· Using a router is recommended




Step 2

Remove knockouts and secure the box onto the floor. Pull the wire through the opening of the floors and knockouts and connect wires based on the wiring diagram.


NOTE:

- Attach the box to the floor using #6 wood screws (not provided).
- Attach the cover to the box using #6-32 mounting screws and tighten firmly.

For a counter-top installation quide, please visit our website and view the attachments under this product's name.

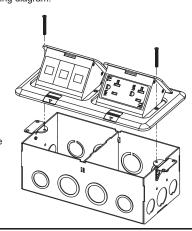

DIMENSIONS

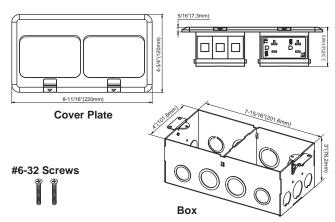

WARRANTY INFORMATION

This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. Original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is nontransferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.

> © 2016 Enerlites Inc. CA. U.S.A. WWW.ENERLITES.COM 0206160010-01 REV 20230802